


# HOME DECORATORS COLLECTION

BF-24663 MSL SHALLOW CUBBIE LEFT

INV#04635










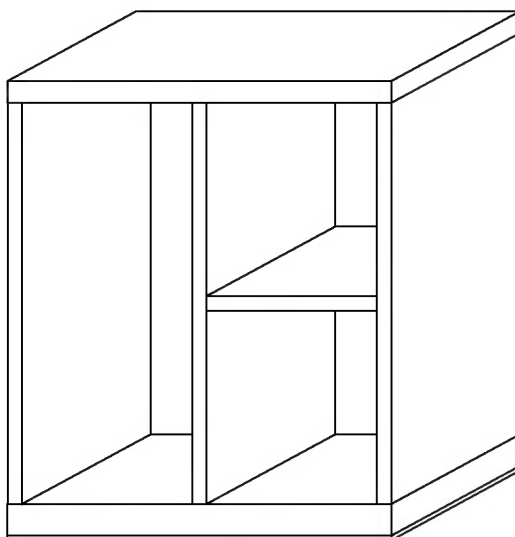


## ASSEMBLY INSTRUCTIONS

Made In China

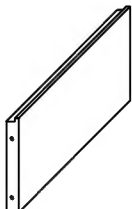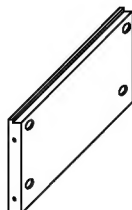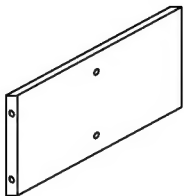

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

**IMPORTANT NOTE:** Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST		
<b>A</b>  TOP PANEL-1PC	<b>B</b>  RIGHT SIDE PANEL-1PC	<b>C</b>  LEFT SIDE PANEL-1PC
<b>D</b>  BOTTOM PANEL-1PC	<b>E</b>  STAND PANEL-1PC	<b>F</b>  ACROSS PANEL-1PC
<b>G</b>  BACK PANEL-1PC	<b>H</b>  CAM-BOLTS-8PCS	<b>I</b>  CAM-LOCKS-8PCS
<b>J</b> 7mm× 5/8"  SCREWS-11PCS	<b>K</b>  CAM-TOOL-1PC	<b>L</b>  DOWELS-8PCS



M



CAM-LOCKS CAPS-8PCS




NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

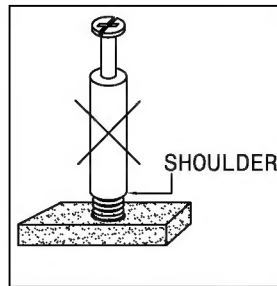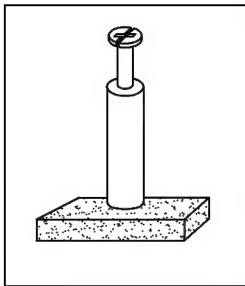


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

## HOW TO USE THE CAM-TOOL

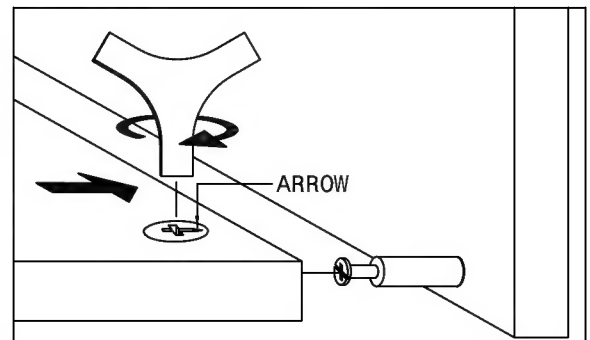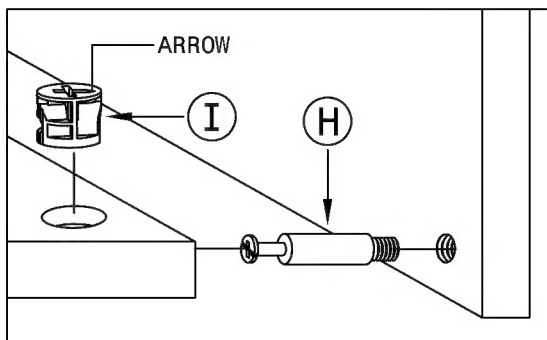


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

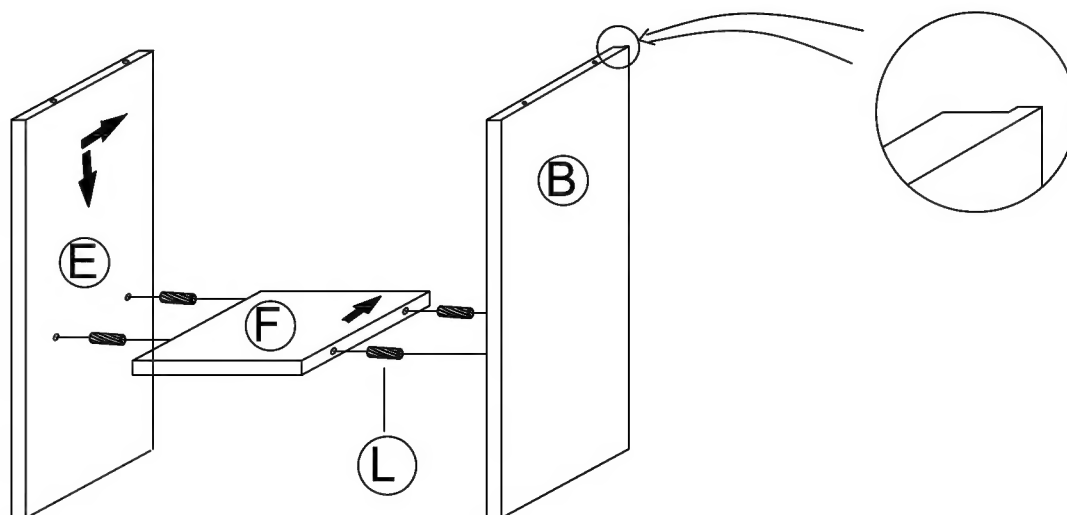


## 1) . ASSEMBLE THE STAND/RIGHT SIDE PANEL(E/B) .

- INSERT 4 DOWELS(L) INTO THE HOLES IN ACROSS(F), STAND(E), AND RIGHT SIDE PANELS(B) .

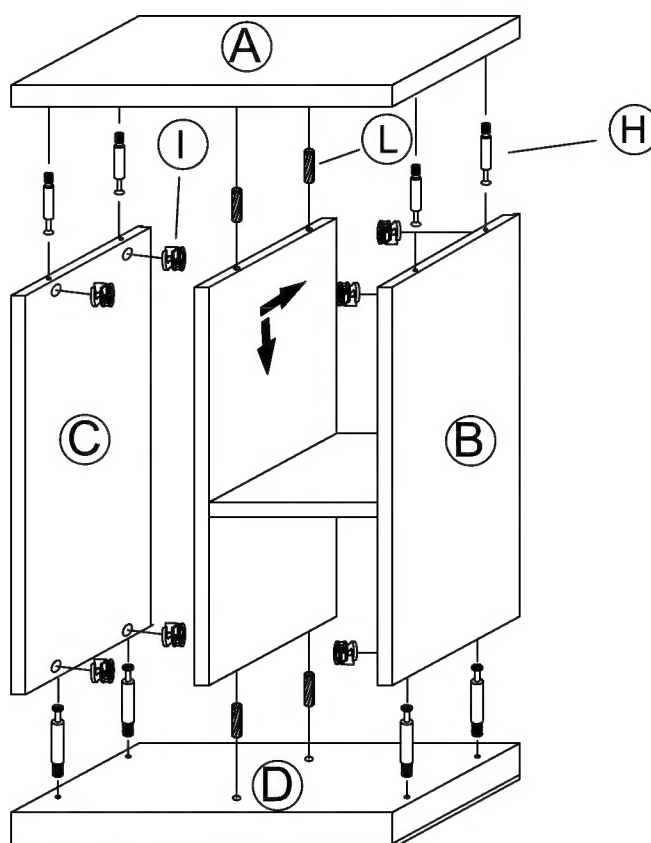


## 2) . ASSEMBLE THE TOP/BOTTOM PANEL(A/D) .

- ROTATE THE 8 CAM-BOLTS(H) AND INSERT THE 4 DOWELS(L) INTO THE HOLES IN THE TOP AND BOTTOM PANELS(A/D) .
- PLACE THE 8 CAM-BOLTS(H) INTO THE HOLES IN PANELS(B/C) AND ATTACH USING 8 CAM-LOCKS(I) .

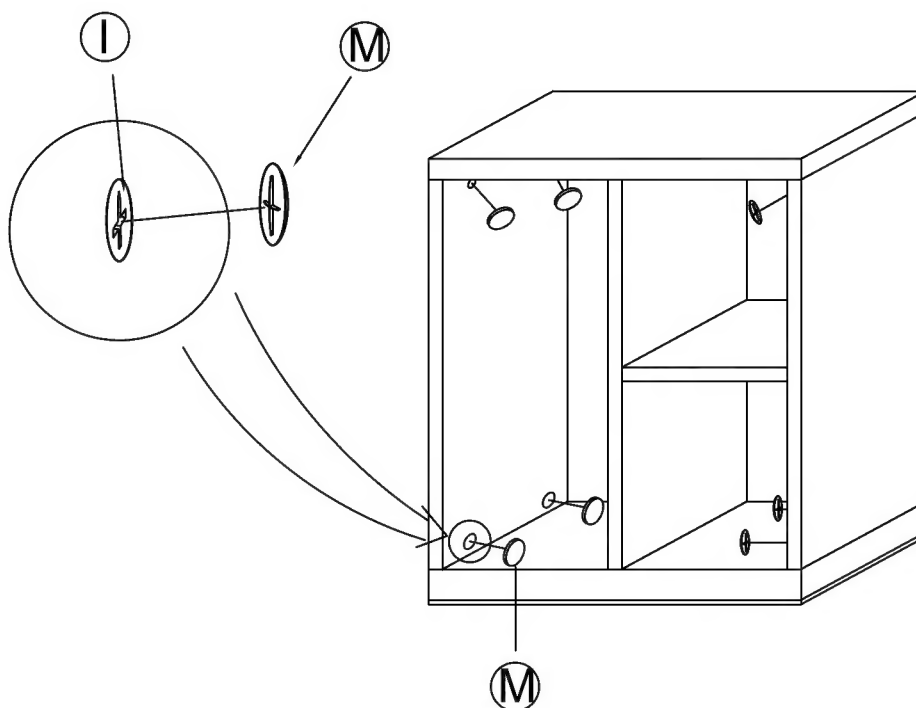

### 3) . ASSEMBLE CAM-LOCKS CAPS(M) .

- ATTACH THE 8 CAM-LOCK CAPS(M) ONTO THE 8 CAM-LOCKS(I) .

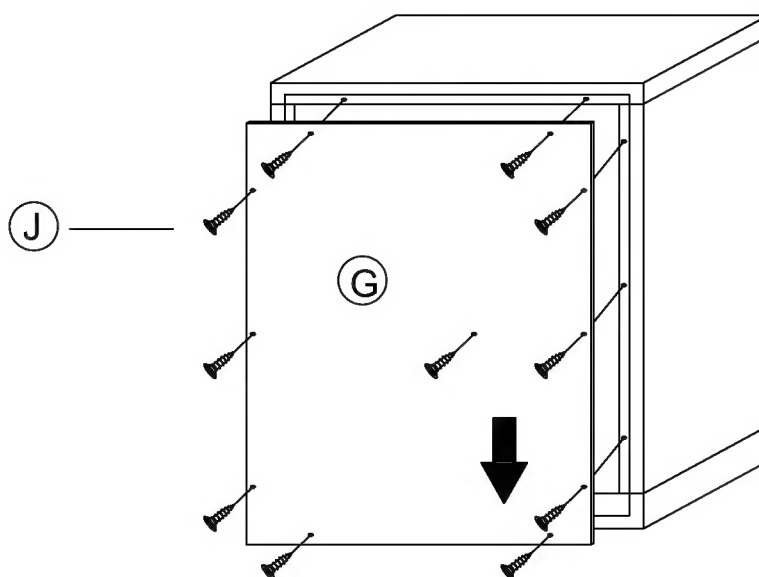

### 4) . ASSEMBLE BACK PANEL(G) .

- ATTACH BACK PANEL(G) USING 11 SCREWS(J) .